



### GUY LINES


The guy lines supplied with your awning should be attached to the corner and centre joints of the frame UNDERNEATH the canvas. If guy lines are to be used on an annexe, these are to be attached to the white plastic O ring on the outside corners.

Feed the lines through the corner and centre cut-outs of the canvas and peg down to the ground (see figure 1).

\* A careful check of their tension should be made regularly \*


**ON NO ACCOUNT SHOULD THE GUY LINES BE ATTACHED TO THE SHORT CANOPY POLES AS THIS WILL WEAKEN THE JOINTS.**

NB due to the design, guy lines are **NOT** required on AiR awnings.

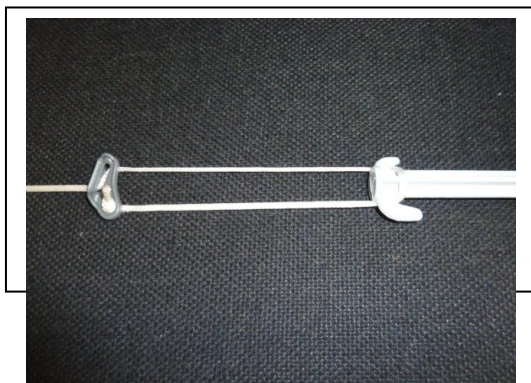

← Figure 1

Figure 2 →

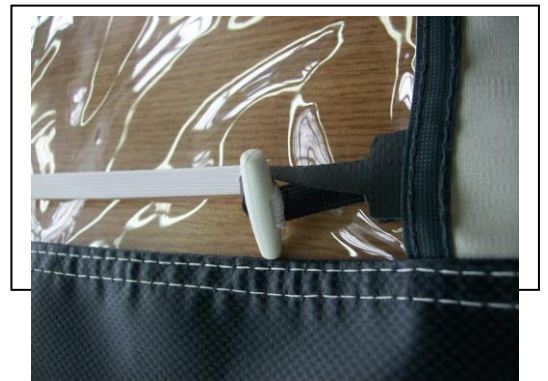

### STORM KITS

In addition to the guy lines supplied as standard, a BRAND NEW storm kit is now available as an optional extra direct from Bradcot, or included as standard with the Residencia model.

Please visit [www.bradcot-awnings.co.uk](http://www.bradcot-awnings.co.uk) or call 01274 306811 for further details.

**PLEASE BE AWARE THAT ANY STORM KIT USED, OTHER THAN A BRADCOT STORM KIT, WILL INVALIDATE YOUR AWNING GUARANTEE**

### ELASTICATED CURTAIN CORDS

For all awning panels which are to be pegged at an angle, please secure the elasticated cords to the sewn in loops positioned at the bottom of each panel (see figure 2). This will hold the curtains back once closed.

Any panles that are designed to be pegged vertically to the ground, do not require curtain elastics.

#### Pack Contents:

3 x 3m lengths of **white guy line** & 3 x runners  
2 x 3m lengths of **white guy line** & 2 x runners  
2 x 90cm elastics with toggles

All “**traditional**” full awnings  
Porches & Annexes but **NOT** Air models  
All “**traditional**” models except Annexes