



## **STORM KIT INSTRUCTIONS**

**THE BRADCOT STORM STRAPS ARE TO BE USED ON THE 'INSIDE' OF YOUR AWNING.**


ATTACH THE STRAPS TO THE FRAME BY FOLLOWING THE SIMPLE INSTRUCTIONS BELOW;

1. You will see that the straps are in two parts, part 'A' being the short strap with a sewn loop at one end and a sewn in cam buckle to the other. Part 'B' being a much longer strap with a sewn loop to one end only.
2. The loop of strap 'A' should be fitted to the awning frame bracing pole, (the roof pole which runs from the front of the awning to the caravan). If attaching the strap prior to erecting the frame, simply feed the bracer pole into the loop (see diagram 1). If attaching after the awning erected, pass the strap around the pole and thread the cam buckle end through the loop. Please ensure that the strap is as near to the front joint of the pole as possible.
3. Feed the peg through the loop of Strap 'B' (as shown in diagram 2). This is now ready to be attached to strap 'A'.
4. Hammer the storm peg into the ground at a point directly below the cam buckle of strap 'A'.
5. Attach the loose end of the long strap 'B' to strap 'A' by passing through the back of the cam buckle (as shown in diagram 3). Release the gripper and pull strap 'B' through the buckle until taut. There is no need to put too much tension on the straps as you are simply securing the frame to the ground to avoid lifting in windy conditions. For additional security, please ensure that the spikes of the leg poles are placed through the pegging ladders before fitting to the ground. This makes a connection between the frame and the awning and helps to keep it more secure.

Additional sliding clips and ladders are available from [www.bradcot-awnings.co.uk](http://www.bradcot-awnings.co.uk).

### **NEVER ATTACH THE STORM STRAPS TO THE SHORT CANOPY POLES AT THE FRONT OF THE AWNING**

6. To release the storm straps, simply press the spring loaded gripper on the cam buckle. This will allow you to release strap B from the buckle, enabling you to dismantle.

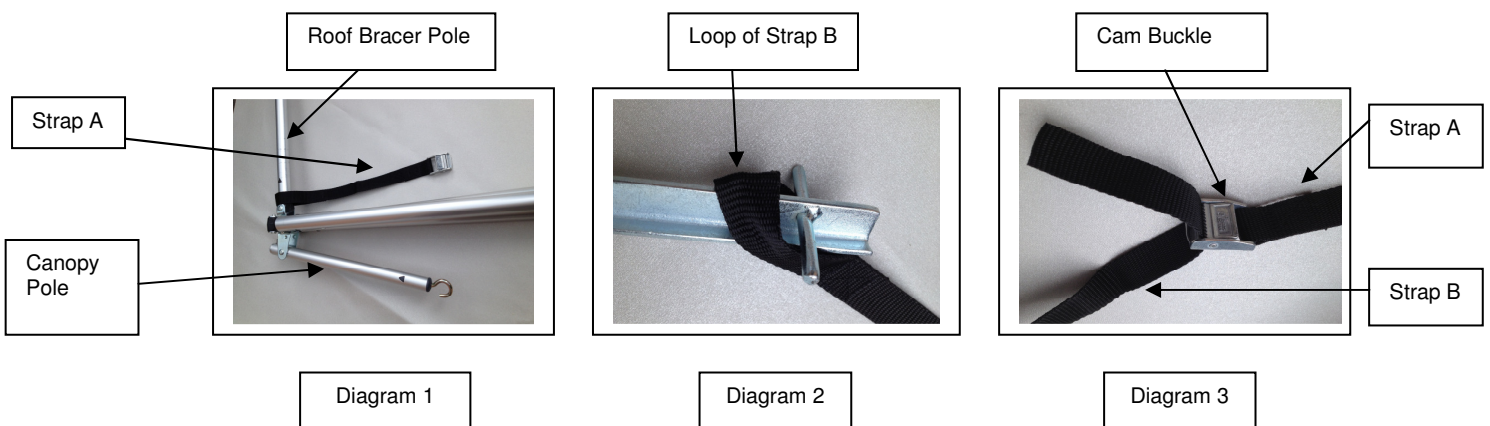

**THE "BRADCOT" STORM KIT IS THE ONLY ADDITIONAL SECURING SYSTEM RECOMMENDED FOR USE WITH YOUR "BRADCOT AWNING".**

**IT HAS BEEN DESIGNED IN SUCH A WAY, AS TO APPLY PRESSURE TO AREAS OF THE AWNING, ABLE TO WITHSTAND THAT PRESSURE.**

**THE USE OF ANY OTHER STROM STRAPS WILL INVALIDATE YOUR WARRANTY.**